


Hanimex CAMERA INSTRUCTION MANUAL

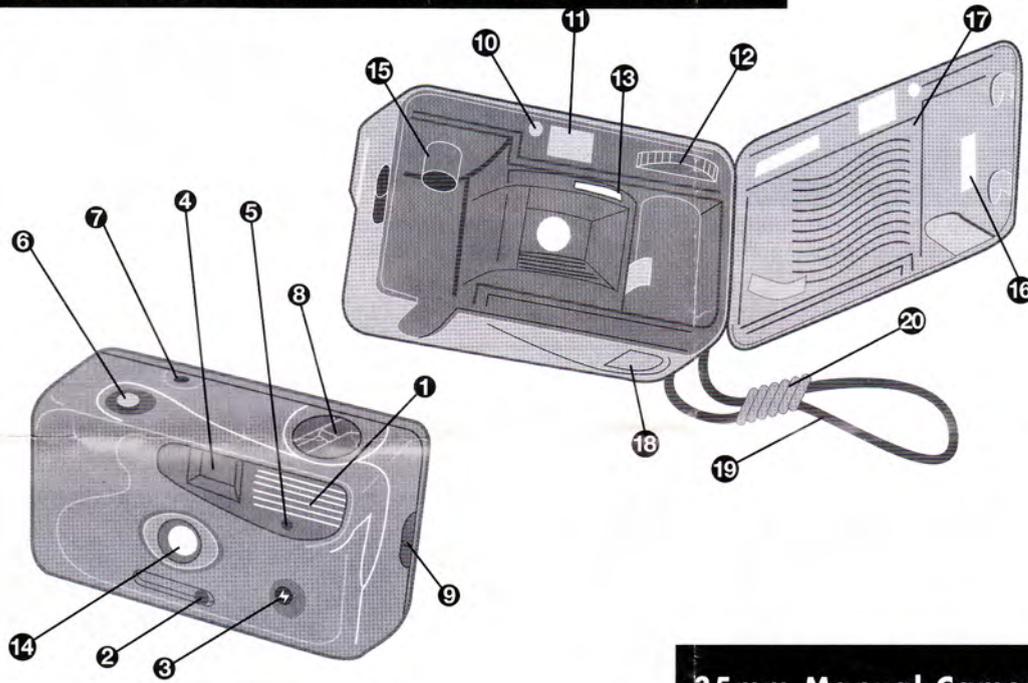


1. Flash window
2. Lens door button
3. Flash button
4. Front viewfinder lens
5. Red Eye Reduction lamp
6. Shutter release button
7. Counter window
8. Rewind lever
9. Film door Button
10. Red Flash ready light
11. Rear viewfinder lens
12. Advance wheel
13. Film sprocket gear
14. Taking Lens
15. Rewind shaft
16. DX film identification window
17. Film Door
18. Battery Door
19. Carrying Strap
20. Strap Sleeve

THIS CAMERA USES 1 AA ALKALINE BATTERY.


35mm Manual Camera with One Touch

Built In Flash and Red Eye Reduction Feature


A/ INSTALLING BATTERY

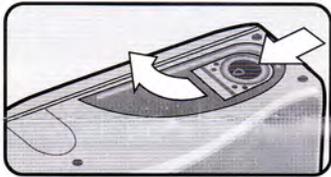

1. Open the battery door by moving the locking button in the direction of arrow.

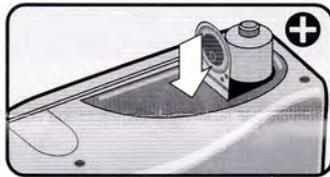

2. The battery should be inserted, as shown by the symbols on the battery door with the tip (+) up.

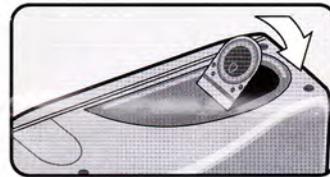


3. Close the battery door until it snaps shut.


IMPORTANT :

- a. Replace battery when it takes longer than 15 seconds for flash ready light to come on ;
- b. Always remove the battery when storing your camera for any length of time to prevent battery corrosion or leakage.


B/ LOADING THE CAMERA

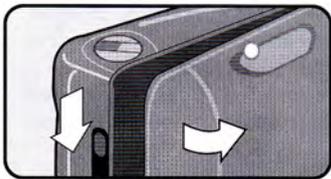


1. Open the film door by pushing down the locking button.

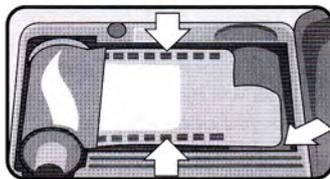


2. Insert the film into the film chamber, put out the film leader and insert the end into film compartment.

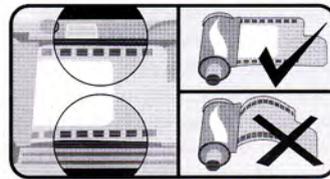


3. Make sure the film perforations engage the metering wheel teeth, and that the film lies evenly between the guide rails.

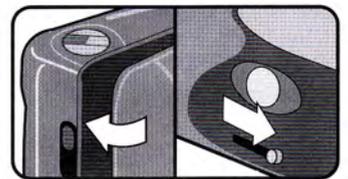

4. Close the door. Open the lens door by sliding the lens door button.

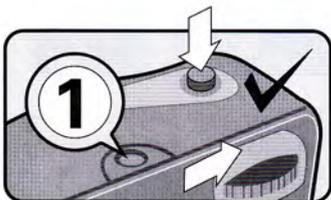

5. Alternately depress the shutter button and advance the film wheel until the no '1' appears in the film counter window.

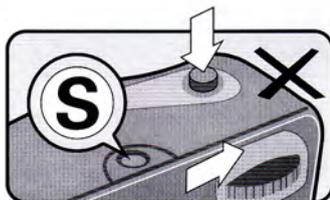

6. If the counter remains in the 'S' position, the film is improperly loaded. Open the door and refer back to step 2 to 6.




7. The film counter will count the no. of picture you have already taken. The counter will automatically return to 'S' when open the film door.


NOTES :

- a. This camera accepts 35mm films of ISO(ASA) 100, 200, 400 or 1000 in 12, 24 and 36 exposure.
- b. A film identification window or the film door shows the type of film that using.


C/ PICTURE TAKING

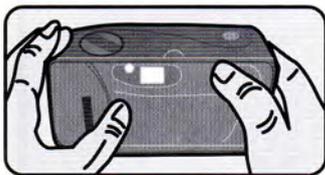

1. Hold the camera firmly to your eye and frame your subject in the center.

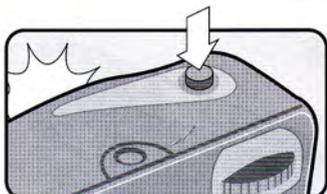

2. Gently depress the shutter button without shaking the camera.

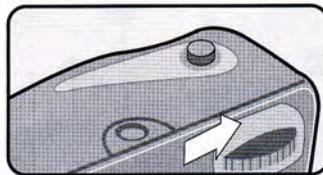

3. After each exposure, advance the film fully until it stops.

NOTES :


- Keep your fingers away from the lens and the flash.
- You can lock the shutter release button to prevent accidental exposure by closing the lens door.

THIS IS A ONE TOUCH FLASH CIRCUIT AND IT WILL SHUT DOWN AUTOMATICALLY BY ITSELF AFTER 20 SECONDS WITHOUT USING !!

D/ FLASH PICTURE



1. When taking the picture indoor, or under dark condition at outdoor, use the built in electronic flash.

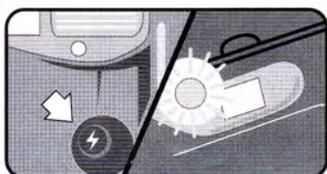

2. Depress the flash button one time, the flash will start charging until the 'Red' ready light comes on.


NOTES :

- For proper flash exposure observe :
ISO(ASA) 100 - up to 8 feet ISO(ASA) 400 - up to 16 feet
ISO(ASA) 200 - up to 12 feet ISO(ASA) 1000 - up to 20 feet
- Wait a few seconds after the flash ready light comes on before taking the picture in poorly lit area to ensure the maximum flash brightness.
- To wake up the flash when it automatically shut down after 20 second, just gently depress the flash button again.


E/ REWINDING THE FILM



1. When you have reached the end of film, the film advance wheel will stop. **DO NOT OPEN THE FILM DOOR YET !** You must rewind the film first.

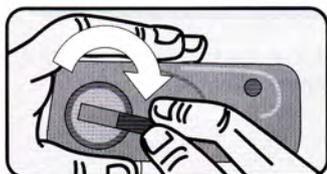


2. Flip up the rewind lever and turn it in the direction of arrow (clockwise). When all the film has been rewound into the film cartridge. You will feel a change in the force needed to turn the rewind lever and the clicking sound will stop.

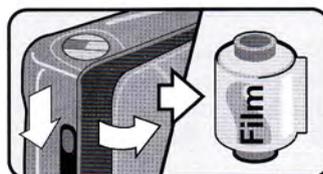


3. Open the film door, pull out the rewind lever to remove the film cartridge and send it for film processing. The film counter will reset to 'S' position when you open the film door.

F/ RED EYE REDUCTION

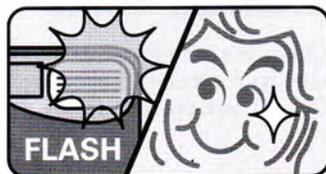

1. The red RER lamp will light up when the flash is fully charged. It will automatically shut off in the same time as the flash is comes off. It can kill the red eye symptom in the picture.

G/ HELPFUL HINTS

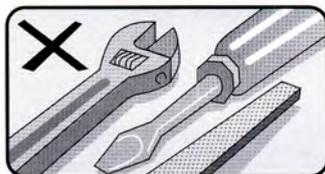

1. Do not attempt to take the camera apart or repair it. The internal flash components operate at high voltage and are dangerous to handle. Any signs of tampering with the camera will void your warranty.



2. Never force any operation on your camera. If the camera does not function correctly, read the instruction manual once more.



3. Protect your camera from rain, dampness, and excess temperature. When storing your camera or film, select a cool dry area away from direct sunlight or heat. Do not leave your camera or film in the truck or car.



4. Do not use any cleaning liquids or lens cleaning solution on the camera or on the lens. Use only a dry lintless cloth, or a blower designed for camera lenses.