

MINOLTA CAMERA BAG 101



Serial Nr. no
Minolta Code: unknown

Characteristics and Functions

The Minolta Camera Bag 101, made of black cordura, is equipped with an adjustable shoulder strap and a handle for carrying by hand. To access the internal compartment, you must first open the two black plastic carabiners located on the back on the upper side and then open the zipper along the three sides. Inside we find three padded dividers that can be fixed at will using the velcro that runs horizontally on the two long sides of the compartment itself. The front pocket has a zipper that completely covers three sides, thus allowing the front part to be completely overturned. The interior is equipped to fix small objects such as pens, documents, filters. There is also a zippered mesh pocket. On the front, at the bottom, a band in black plastic material such as leatherette is sewn, with gold silk-screen printing: "MINOLTA" with the rising sun in the "O". On the sides, below the strap attachment point, there are two large black rubber bands on each side to which up to 4 35mm films can be attached. contained in the respective cylindrical jars. On the back run two partially sewn black cordura bands that leave two sections open in which it is possible to attach a small tripod.

Weight 525g., Shoulder strap included. Length 235mm. Width 180mm. Height 285mm., Handle included