

MINOLTA FLASHGUN DELUXE III 1968



Serial Nr.: no
Minolta Code: 8626

Characteristics and Functions

The Minolta Flashgun Deluxe III has a white plastic body and can be used with 3 types of bulb bulbs: Standard, M2 and AG. On the front side there is the foldable metal parabola that can be used with a wide angle of illumination or with a more pronounced concavity for more concentrated lighting. The dish can be rotated upwards by 30, 60 or 90 degrees. In the center is the seat where to insert the foot of the light bulb; on the lower side comes out the gray sync cable

for connection with the camera. This cable is foldable into the battery compartment and easily attached to a dedicated foot. The hot shoe has a black plastic lock ring. On the back there is the table of Guide Numbers for the calculation of the working diaphragm. The Test button, orange in color, is located on the left, while on the upper side there is the large black button for ejecting the bulbs used. Power is supplied by a 15v battery (Mallory M 504 type or equivalent). To access the battery compartment, the white frame located under the dish must be released by acting on the small steel clip located in the lower part.

Weight 112g., Battery and lamp excluded. Dimensions with parabola closed: width 45mm.; height 103mm.; depth 44mm.