


MINOLTA FOCUSING SCREEN 7 – Type L

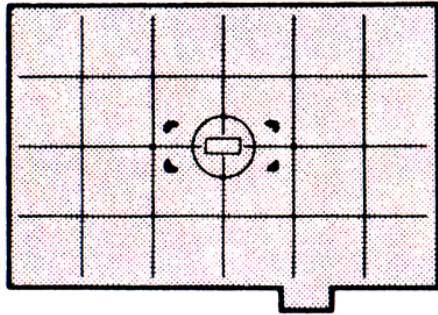

Serial Nr. no
Minolta Code: 8234-220

Characteristics and functions

The Minolta Focusing Screen 7 - Type L can be used with the Dynax / Maxxum 7000i camera. The screen is suitable for panoramic and architectural shots; it comes with a matte field, reticle, central focus area, circular area for Spot reading and references for the wide-angle focus area. The screen should never be touched with the hands thus avoiding leaving fingerprints or scratches.

Extraction:


1. Place the camera without lens, resting on its back.
2. With the special tweezers supplied, pull the lock in the direction of the arrow - figure A until the screen door opens towards the camera mirror - figure B.
3. Take the tab of the focusing screen with tweezers and extract the latter from the device - figure C. Temporarily place the screen in the groove of the black case - figure D.

Insertion:

1. Grasp the screen to be applied to the camera with the tweezers and insert it into the holder, checking the correct alignment.
2. Gently turn the camera over so that the stand and screen are in the correct position. - figure E.
3. With the rear end of the tweezers push the tab of the support so that the locking device clicks into the correct position - figure F.

Part identifications:

- 1 Screen lock
- 2 Support
- 3 Holder tab

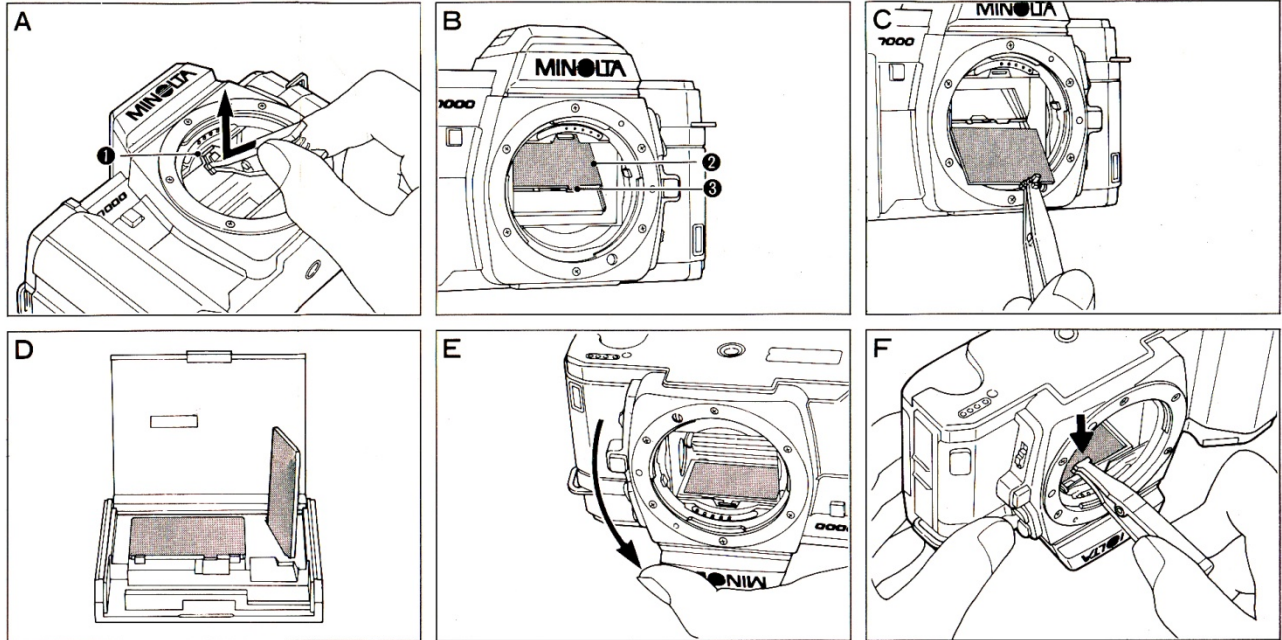

Weight of the plastic package complete with screen and tweezers: 25g. Dimensions of the plastic package: 67mm wide; length 56mm .; thickness 12.5mm..