


# MINOLTA FOCUSING SCREEN 70/90 – Type PM

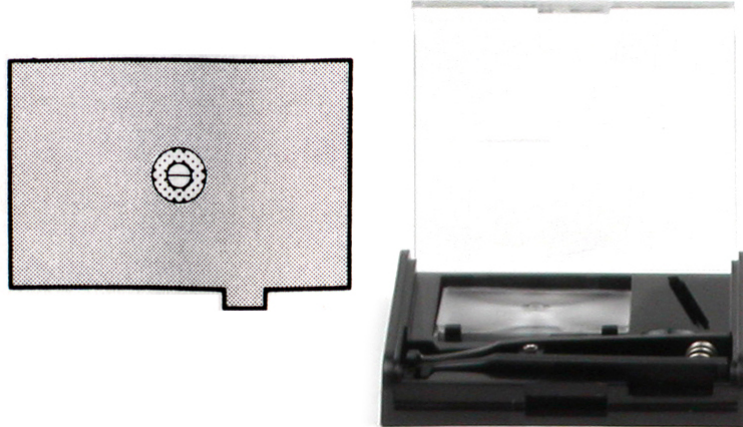

Serial Nr. no  
Minolta Code: 8231-310

## Characteristics and Functions

The Minolta Focusing Screen 70/90 - Type PM can be used with the 7000 AF and 9000 AF cameras. The screen is suitable for general shooting and has a matte field and a broken image surrounded by a crown of microprisms. The screen should never be touched with the hands thus avoiding leaving fingerprints or scratches.

### Extraction:


1. Place the camera without lens, resting on its back.
2. With the special tweezers supplied, pull the lock in the direction of the arrow - figure A until the screen door opens towards the camera mirror - figure B.
3. Take the tab of the focusing screen with tweezers and extract the latter from the device - figure C. Temporarily place the screen in the groove of the black case - figure D.

### Insertion:

1. Grasp the screen to be applied to the camera with the tweezers and insert it into the holder, checking the correct alignment.
2. Gently turn the camera over so that the stand and screen are in the correct position. - figure E.
3. With the rear end of the tweezers push the tab of the support so that the locking device clicks into the correct position - figure F.

**Part identifications:**

- 1 Screen lock
- 2 Support
- 3 Holder tab

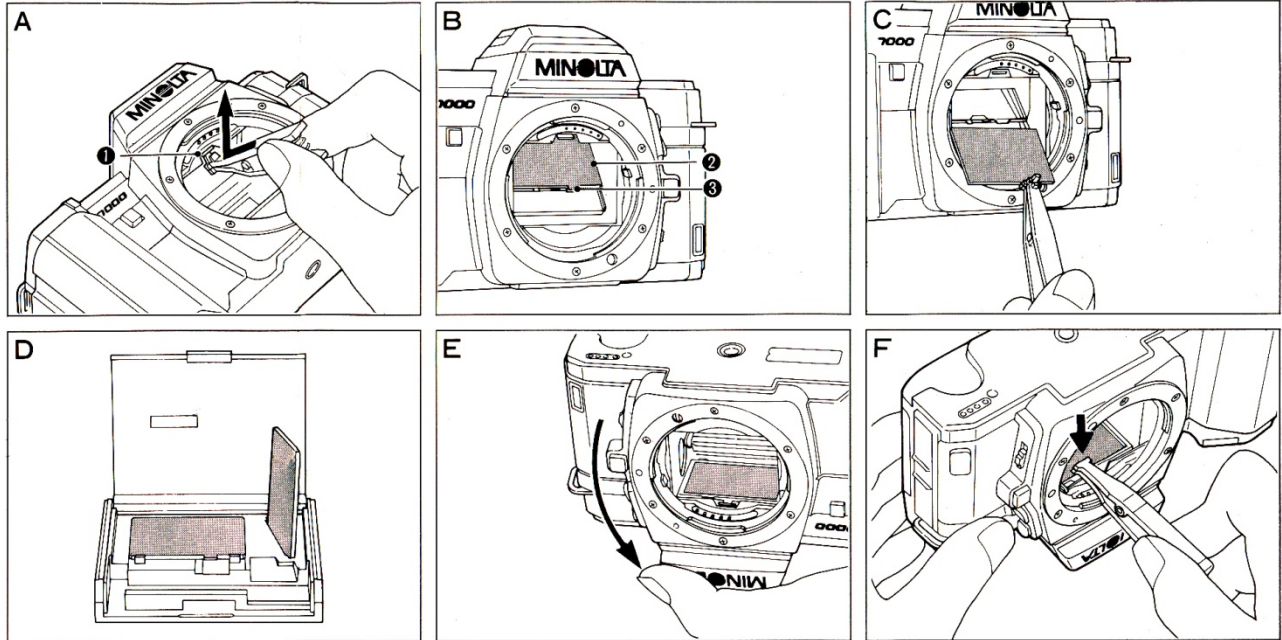

Weight of the plastic package complete with screen and tweezers: 25g. Dimensions of the plastic package: 67mm wide; length 56mm .; thickness 12.5mm.