


ケーブルリリース II

各部の名称




一般撮影での使用方法

ケーブルリリースIIのカメラ取り付けねじをカメラに取り付けます。
 オートストッパーリングをしめつけておくと普通のケーブルリリースになります。
 長さが40cmですから、カメラから少し離れてシャッターが切れます。

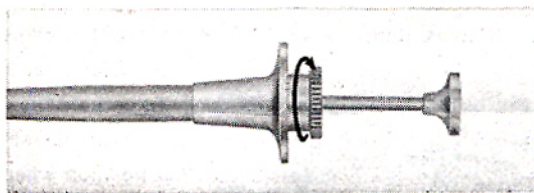

オートストッパーリングの使用法

オートストッパーリングをゆるめてからシャッターを切ると、自動的にロックがかかり押したままの状態になります。解除するには、オートストッパーリングを押してください。

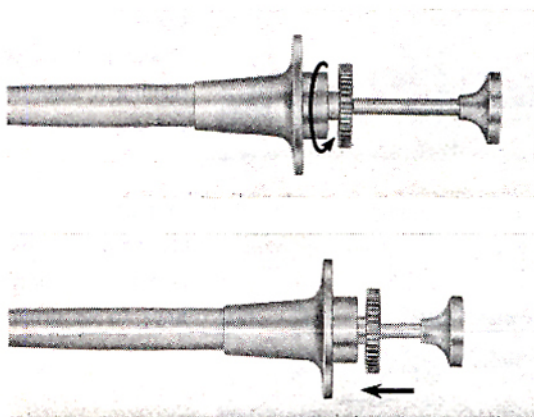

ミノルタカメラ株式会社


〒541 大阪市東区安土町2丁目30番地 (大阪国際ビル)

T E L (06)271-2251(代)

〒105 東京都港区浜松町2丁目4番1号 (世界貿易センタービル)

T E L (03)435-5511(代)

Names of parts

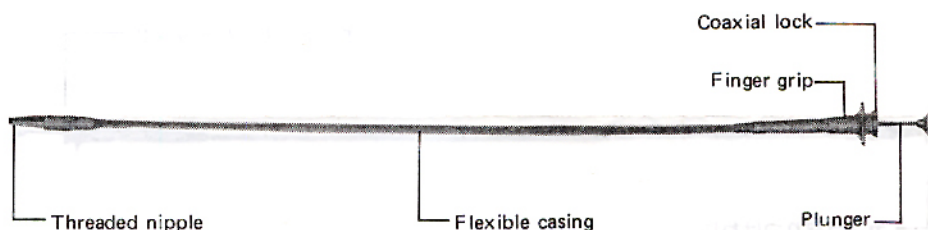


To attach

Simply screw the threaded nipple clockwise into the cable-release socket of the camera until secure.

For normal use


To make ordinary instantaneous or relatively short "bulb," exposures, the coaxial lock should be secured in its released position with no space between it and the plunger side of the finger grip, as shown. This is done by pushing it toward the finger grip and turning it clockwise as far as it will go (about 45°).

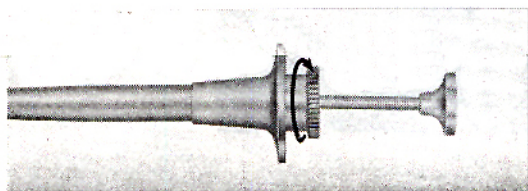

To actuate the shutter, push the plunger, which will spring back to its original position when released.

For "time" exposures

To make relatively long exposures (as of a minute or more), the coaxial lock should be in its engaged position with a space between it and the plunger side of the finger grip as shown. This is done by turning it counterclockwise as far as it will go (about 45°)

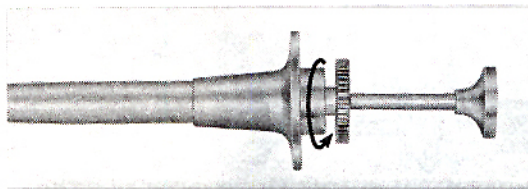

To open the shutter, push the plunger, which will remain at its depressed position. To close the shutter, push the lock toward the finger grip, and the plunger will snap back to its original position.

