

マグニファイヤー V_N

マグニファイヤーV_Nはファインダー中央部の像を約2.3倍に拡大します。より正確にピント合わせをしたい望遠・接写・複写・顕微鏡写真などの撮影時に有効です。

また、マグニファイヤーをカメラから取り外すことなく全視野を確認することができる機能を備えています。

接眼レンズは視度調節式になっており、カメラに取りつけたとき -7.5 から +3.1 ディオプターの範囲で調節できます。





視度調節のしかた


1. カメラの接眼枠の左右の溝にマグニファイヤーの取りつけシューを差し込みます。
2. カメラを遠方の物にむけてレンズの距離リングを∞(無限遠)にします。
3. 視度調節リングを回して、ファインダー像が鮮明に見えるように合わせます。

この状態で被写体にピントを合わせます。

ファインダーの全視野を確認するときは本体を写真のようにストップ位置まではね上げます。

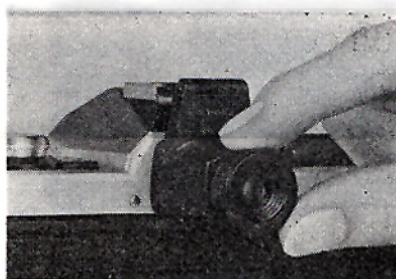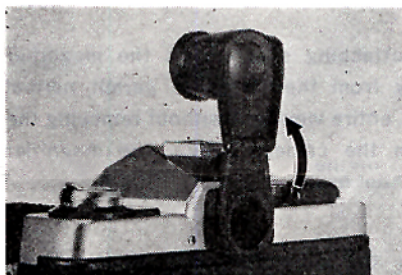

フラッシュを着脱する時や、フラッシュを装着した状態で全視野を確認するときは、本体を回転させます。

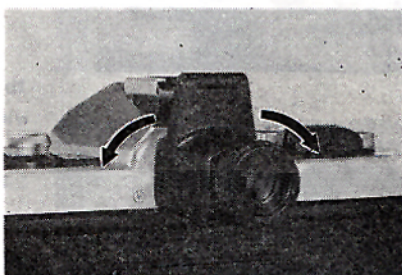

- ★ ミノルター眼レフカメラ (X-1 モーター/X-1 は除く) にマグニファイヤーを装着した状態ではカメラの裏蓋が取り付けシューに当たり開閉できません。裏蓋開閉時は本体を裏蓋の当たらない位置に押し上げてください。

ミノルタカメラ株式会社



〒541 大阪市東区安土町2丁目30番地 (大阪国際ビル)
 TEL (06)271-2251#0
 〒105 東京都港区浜松町2丁目4番1号 (世界貿易センタービル)
 TEL (03)435-5511#0

MAGNIFIER V_N

The Magnifier V_N is useful for precise focusing in telephotography, close-up, coping, photomicrography, etc., as it magnifies the central part of the image in the viewfinder approx. 2.3 times.

A convenient hinged attaching shoe permits the entire viewfinder to be seen without removing the magnifier.

To aid eyeglass wearers, the magnifier can be adjusted from -7.5 to $+3.1$ diopters.

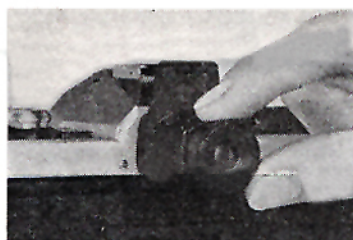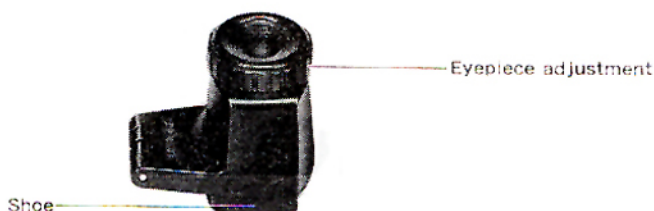


Presetting magnifier :

1. Aim the camera at a distant object, and set the lens focusing ring to the infinity setting.
2. Slide the magnifier on over the camera's eyepiece frame.
3. Look through the magnifier and turn the knurled eyepiece adjuster until the distant object in the central portion of viewing screen appears sharp.



How to use :

1. With the magnifier swung away from the eyepiece, focus on your subject.
2. Swing the magnifier into place and make fine adjustment to focus if needed.

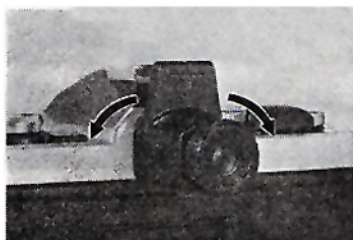

The hinged attaching shoe allows the magnifier to swing away from the finder to permit normal viewing of the entire viewfield without removing the magnifier from the camera body. The magnifier clicks in place for use.

When using the magnifier with an electronic flash or other accessory mounted in the camera's accessory shoe, rotate the magnifier as shown before swinging it away from the finder.

With all Minolta SLR cameras except the XM (XK, X-1) the magnifier must be removed before the camera's back cover can be opened.