

INSTRUCTIONS

TO BUTT SPLICE SUPER 8mm FILM

quik splice*

... is the simplest, most effective splicing and film repairing technique ever devised. Heretofore, Butt Splicing and its advantages were forbidden to the amateur cinematographer, and repairing torn film meant the loss of valuable, irreplaceable frames.

quik splice*

... is an instant, permanent splicing method that requires no scraping, clamps or cements and will work equally well with all types of film bases (tri-acetate, acetate or polyester).


quik splice*

... has been universally accepted and is used and endorsed by leading movie equipment manufacturers, professional cameramen and film studios. When you try it, we think you'll agree with the experts!


HUDSON PHOTOGRAPHIC INDUSTRIES, INC.
IRVINGTON-ON-HUDSON, NEW YORK, U.S.A.



Copyright 1959
HPI S8 INST.

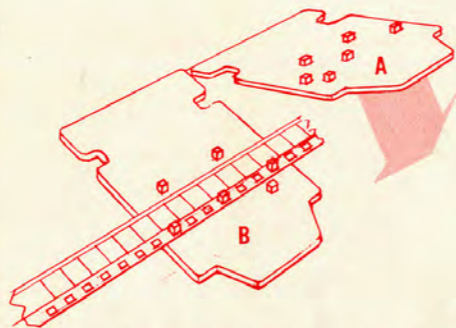


1 Lift lever "A" to approximately vertical position as shown above. Lay the first film strip over the other lever "B". The sprocket holes of the film should be pressed over the lower prongs, marked (1).

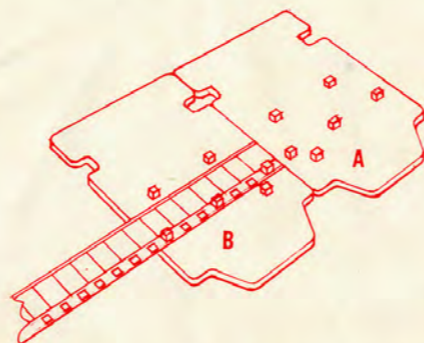


2 Close lever "A" to a horizontal position. The film strip will be automatically cut exactly on the frame line.


PLEASE NOTE: When splicing film make sure the emulsion (dull) side of both film strips face in the same direction.

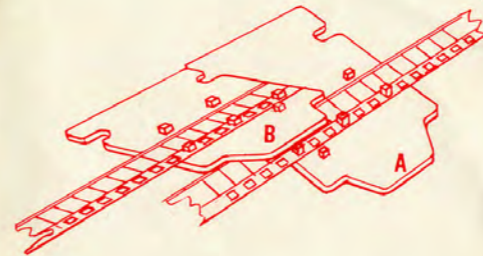

3 Without removing the first film strip, raise lever "B" to a vertical position. Lay the second film strip on the closed lever "A". The sprocket holes of the film should be pressed over the lower prongs, marked (1). Close lever "B" to a horizontal position. The two film strips are now cut and meet each other exactly at the frame line.

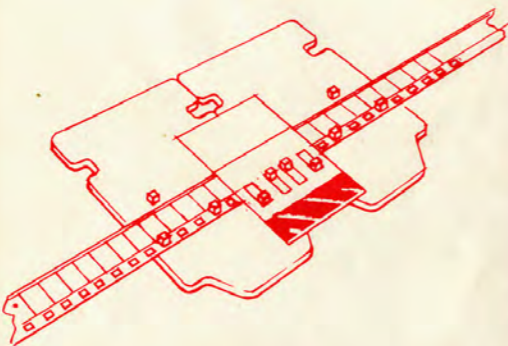

4 Place a Quik Splice* Tape, printed side up, with the RED flap on the two large locating prongs.

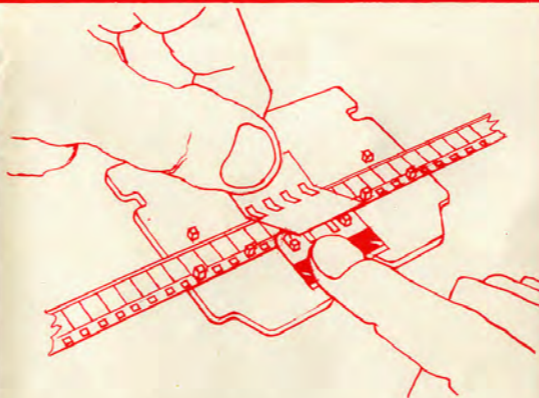

5 Hold the RED half of the Quik Splice* TAPE down with your finger and peel the upper (BLUE) flap off by pulling away from you slowly. Rub the splice area.



6 Turn the film over and replace it on the upper prongs, marked (2). Remove the remaining paper flap and fold tape over the film. Rub the entire splice area to assure a permanent bond.

REPAIR torn film, WITHOUT LOSS OF FRAMES



Repair torn film by centering both pieces of film on splicing plate. Torn ends should butt against each other. Apply splice patch per 8mm instructions.

Additional QUIK SPLICE Mylar Patches are available in 79¢ packs from your dealer or order directly from ...

HUDSON PHOTOGRAPHIC INDUSTRIES, INC.
IRVINGTON-ON-HUDSON, NEW YORK, U.S.A.

MYLAR IS A REG. T.M. OF E. I. DUPONT DE NEMOURS & CO
ALL PRICES SHOWN FOR U. S. ONLY.

*Mfg. by Hudson Photographic Industries, Inc.
*Trademark registered, U.S. & For. patents pending